
Disassembly of Super-slim Cassette


1. Front Panel and Display Board

i) models except for 60k

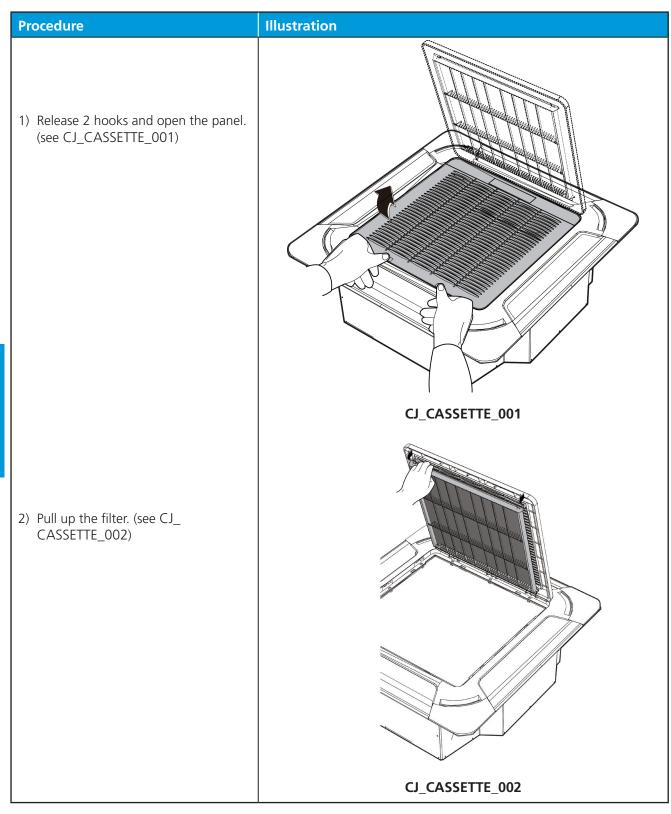

Procedure	Illustration
Procedure 3) Disconnect the connectors and release the panel. (see CJ_ CASSETTE_003)	Image: state stat

ii) 60k models

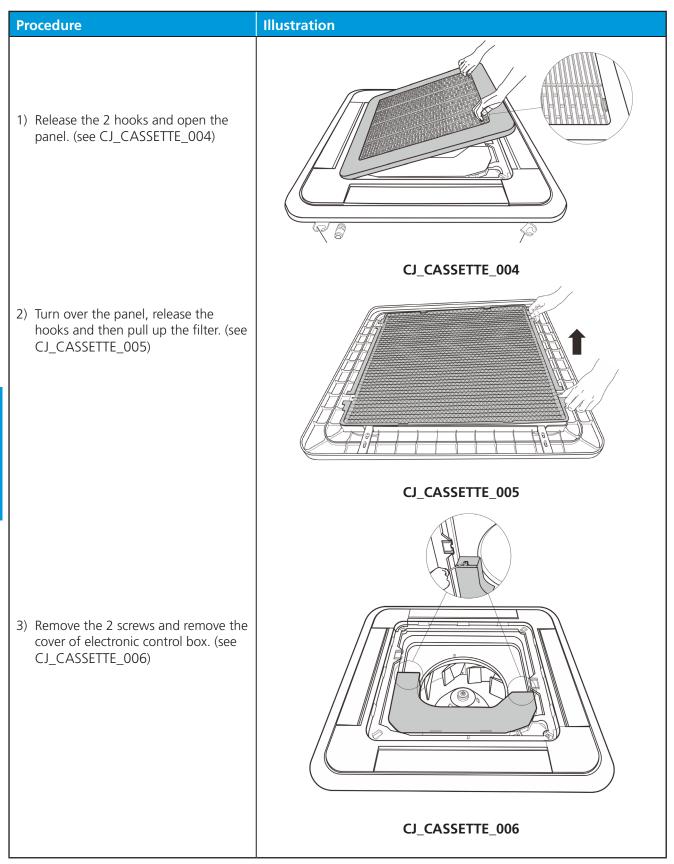



Procedure	Illustration
4) Disconnect the connectors of the display board and the fan motor. (see CJ_CASSETTE_007)	
	CJ_CASSETTE_007
5) Remove the 4 screws and release the 2 hooks of the panel. (see CJ_ CASSETTE_008)	
	CJ_CASSETTE_008

Maintenance and Disassembly

2. Electrical parts (Antistatic gloves must be worn.)

i) models except for 60k

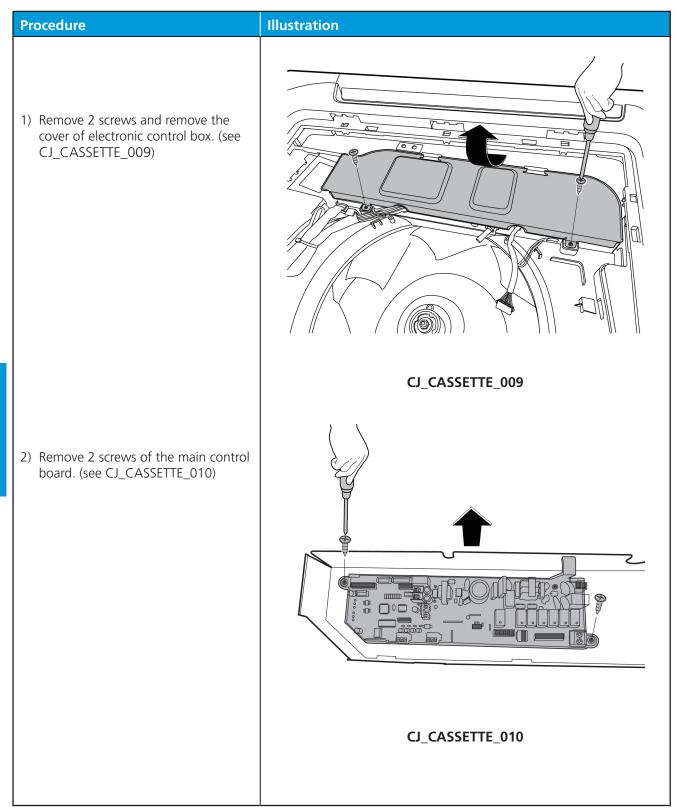

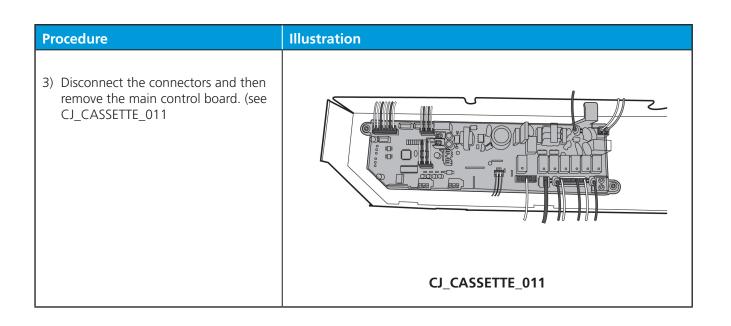

iii) 60k models

Procedure	Illustration
 Disconnect the connectors and then remove the main control board. (see CJ_CASSETTE_012) Remove the 5 screws of the electronic control box. (see CJ_ CASSETTE_012) 	
	CJ_CASSETTE_012




7. Water Colletor(for 60k models)

Procedure	Illustration
1) Remove the 2 screws of the ventilation ring. (see CJ_ CASSETTE_013)	
	CJ_CASSETTE_013
2) Remove the 4 screws of the water collector. (see CJ_CASSETTE_014)	
	CJ_CASSETTE_014

Maintenance and Disassembly

3. Display Board

i) models except for 60k

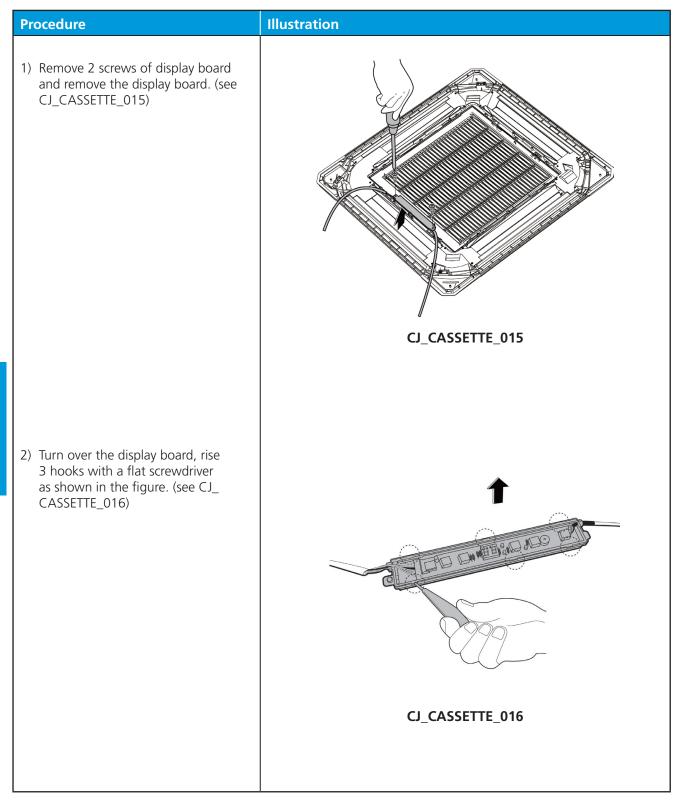


iv) 60k models

Procedure	Illustration
1) Remove the 1 screw of the display board cover and then pull it up. (see CJ_CASSETTE_017)	
	CJ_CASSETTE_017
2) Turn over the panel flame, release the 3 screws of each corner. Then release the hook of the display board. (see CJ_CASSETTE_018)	CL_CASSETTE_018


Procedure	Illustration
1) rotate the display board in the direction shown in the fiure, then take the display board down. (see CJ_CASSETTE_019)	
	CJ_CASSETTE_019
2) Remove the 2 screws of the step motor and then disconnect the wire connected to step motor. (see CJ_ CASSETTE_020)	C_CASSETTE_020


4. Fan motor and fan

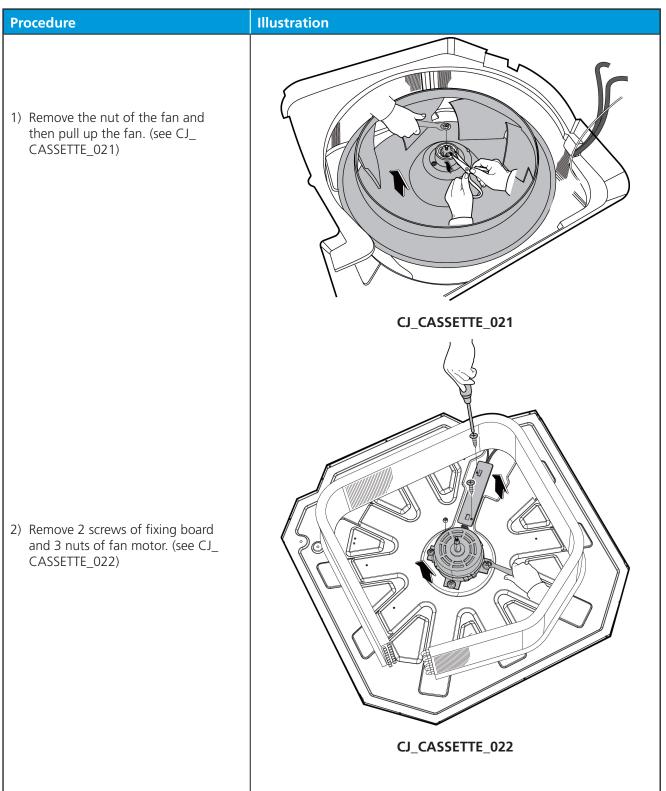

Maintenance and Disassembly

5. Evaporator

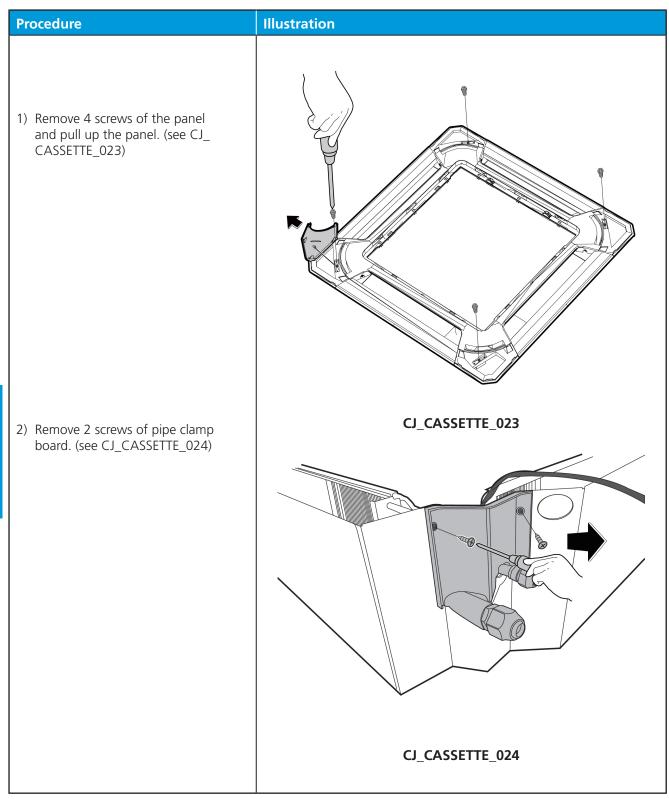

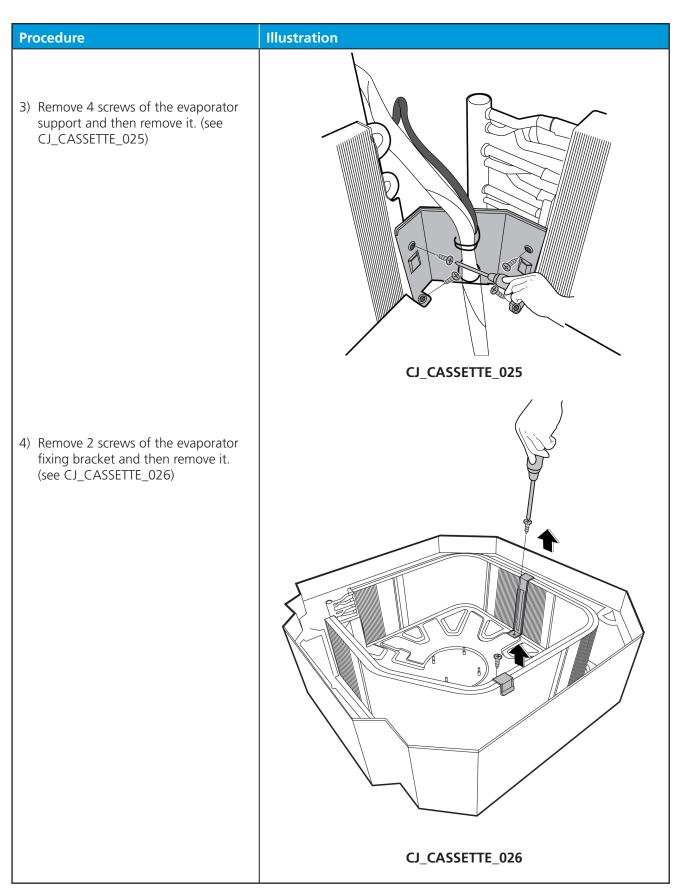

6. Water Pump

Procedure	Illustration
1) Take off the fasten belt of the water pump. (see CJ_CASSETTE_027)	
	CJ_CASSETTE_027
2) Pinch the metal wire in the direction shown in the figure to release it. (see CJ_CASSETTE_028)	
	CJ_CASSETTE_028

